



## FOR DRUM HANDLING & DISPENSING.

The single solution for drum handling safety, mobile dispensing capability, and built-in spill containment!


The Gator Spill Containment Caddy offers you convenient handling and dispensing of hazardous chemicals with complete assurance of compliance with EPA and OSHA regulations. It is the ideal choice for managing either 205 or 60 Litre drums; nylon strap holds drum securely in place.

**Drum Management** - Transport up to 275 Kg. loads easily and safely, minimising back strain and injuries. Ergonomically designed for tipping, with back kickplate positioned to assure weight is not absorbed by the spinal column. Big rounded handles accommodate heavy work gloves for comfortable gripping. Large 25.4 cm wheels roll easily over shop floors.

**Spill Control** - Should a spill occur, or even if the drum leaks or splits a seam, the oversized 250 Litres spill sump will contain the chemical eliminating both the hazards and hassles of a chemical spill in your facility. Exclusive "open view" sump design makes clean-up simple and quick. One piece double-walled body adds strength and eliminates leaks. Spills are contained within unit, not between walls as in similar products.

**Chemical Resistance** - Gator protected polyethylene construction provides maximum chemical compatibility and resistance preventing corrosion and deterioration, assuring a long lifetime of service.

**Outdoor Caddy** offers all the convenience and protection described above with the additional advantages of pneumatic tires. The outdoor caddy moves smoothly and steadily over rough, bumpy terrain.

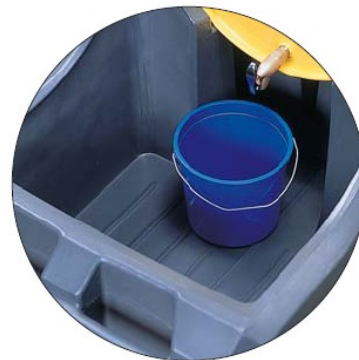

Open view sump

Product No. 28901

## PBA SAFETY SPILL CONTAINMENT CADDY

Model No.	Product Description	Sump Cap. (Litres)	Load Bearing Capacity	Outside Dim. W x D x H
28901	Indoor caddy	205	275 Kg.	81cm x 184cm x 68cm
28908	Outdoor caddy	205	275 Kg.	81cm x 184cm x 68cm



Product No. 28908

